

MODEL: T1872BR**24 HOUR DIAL TIME SWITCH WITH "SKIPPER®"****2 NORMALLY OPEN - 2 NORMALLY CLOSED SET OF CONTACTS C US**

(MAY BE WIRED AS DOUBLE POLE DOUBLE THROW)

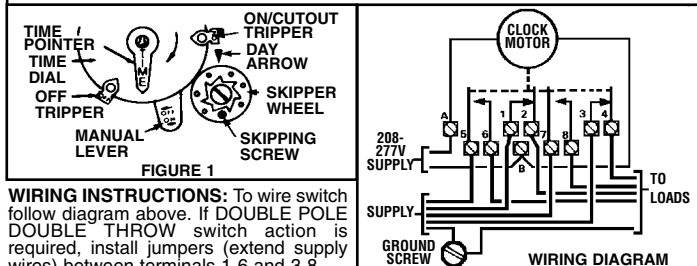
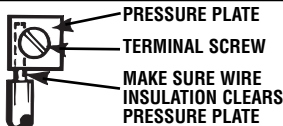
40 AMP. RESISTIVE, EACH POLE 120-480 VOLT AC;**40 AMP INDUCTIVE TUNGSTEN OR 1000 VA PILOT DUTY EACH POLE****120-277 VOLT AC; 2 HP (24 FLA) - 120V AC; 5 HP (28 FLA) - 240V AC.****INDEPENDENTLY WIRED CLOCK MOTOR: 208-277 VOLTS-60 HZ.****CLOCK MOTOR VOLTAGE AND CYCLE MUST BE AS SPECIFIED. TO ORDER REPLACEMENT, INDICATE ART NO. (WG--) ON MOTOR COVER.**

FIGURE 1

WIRING INSTRUCTIONS: To wire switch follow diagram above. If DOUBLE POLE DOUBLE THROW switch action is required, install jumpers (extend supply wires) between terminals 1-6 and 3-8.

Use solid or stranded COPPER wire with insulation to suit installation. See gauge selection table for normal service applications. To make power connections see illustration below. **REPLACE INSULATOR BEFORE TURNING ON ELECTRICITY.** Motor voltage and cycle (Hz.) must be as specified.

MINIMUM COPPER WIRE SIZE (AWG)	MAX. LOAD (AMP)	MIN. INSULATION TEMP (°C)	75°C INSULATION MAX. MOTOR LOAD (HP)			
			SINGLE PHASE		3 PHASE	
			120 V.	240 V.	208 V.	240 V.
14	15	60	1/2	2		
12	20	60	1	2 1/2		
10	30	60	2	3	N/A	N/A
8	40	75	-	5		

**PROGRAMMING INSTRUCTIONS**

- **TO SET "ON" AND "OFF" TIMES:** Hold trippers against edge of **CLOCK-DIAL**, pointing to time (AM or PM) when **ON** and **OFF** operations are desired, tighten tripper screws firmly. For additional tripper pairs on **CLOCK-DIAL** order 156T1948A.
- **TO SET TIME-OF-DAY:** Pull **CLOCK-DIAL** outward. Turn in either direction and align the exact time-of-day on the **CLOCK-DIAL** (the time now, when switch is being put into operation) to the pointer. **DO NOT MOVE POINTER.**
- **TO SKIP OPERATION(S) ON SELECTED DAY(S):** Insert **SKIPPING SCREW(S)** in **SKIPPER WHEEL** for day(s) automatic operation(s) is/are NOT required. Tighten screws firmly. Move **MANUAL LEVER** to "OFF" and rotate **SKIPPER WHEEL** to locate correct day-of-week opposite **DAY ARROW**-- "YESTERDAY" if **ON/CUTOUT TRIPPER** has not yet advanced wheel "TODAY" if it has.

OPERATING INSTRUCTIONS

- **TO OPERATE SWITCH MANUALLY:** Move **MANUAL LEVER** below **CLOCK-DIAL** left or right as indicated by arrows. This will not effect next operation.

CAUTION: TO AVOID SLOW SWITCH ACTION FAILURE, DO NOT OPERATE SWITCH MANUALLY NOR PLACE A TRIPPER 4 HOURS PRIOR TO ON/CUTOUT TRIPPER SWITCHING.

- **IN CASE OF POWER FAILURE,** reset **CLOCK-DIAL** to proper time-of-day. See programming instructions.

INTERMATIC INCORPORATED
SPRING GROVE, ILLINOIS 60081-9698