

# Ascend™ Smart In-Wall Timer Quick Start Up Guide

Before setting up your timer, please watch support videos at:  
[Intermatic.com/AscendSupport](https://www.intermatic.com/AscendSupport)

Search for ‘Ascend Intermatic’ and download the app.



1. Open Ascend app and select “Skip For Now” or “Create Account” if remote access is needed.
2. Open mobile device Wi-Fi settings and select the timer SSID (7DT-xxx).
3. Enter password “**intermatic**”.
4. Open the Ascend app and tap “New Timer” to set up.
5. Enter the requested 5-digit pin found in INFO/WIRELESS on the timer.
6. Follow the steps in the app to complete the set up.