

Quick Tips for Ascend™ Smart In-Wall Timer

Before setting up your timer, please watch support videos at:
Intermatic.com/AscendSupport

Search for 'Ascend Intermatic' and download the app.



Pair to Phone

1. Select "Skip For Now" or "Create Account" if remote access is needed.
2. Open mobile device Wi-Fi settings and select the timer SSID (7DT-xxx).
3. Enter password "**intermatic**".
4. Open the Ascend app and enter the requested 5-digit pin found in INFO/WIRELESS on the timer.
5. Tap refresh and "New Timer" will now show within the Devices Dashboard.

Connect to Wi-Fi

1. From the Device Dashboard within the app, go to the "Schedule" screen and select Settings.
2. Select "Wi-Fi Settings" and tap "Connect to Wi-Fi".
3. Enter your Network Name and Network Password. Hit Save.
4. The router icon will now appear on the timer.

Remote Access

1. Device screen of app will show you are logged in or go to 'My Account' to create one.
2. When timer within device screen is selected a note will appear: "The timer must be registered with your Intermatic Connect account for remote access. Would you like to do that now?" This will enable the timer to now be controlled remotely.
3. Timer will now show "Remote (cloud)" above timer name.

For more information:
Intermatic.com/Ascend

158--01931REF

